 


Prelude

Quick start guide
快速使用指南



BEFORE POWERING UP..

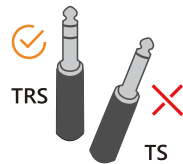

Caution: please do not attempt non 3.5mm TRS connections, TS connections may damage the device and will not be covered under warranty

QUICK START

 
 
- ① Insert SD card, Hold power button for 3 seconds
- ② Connect headphones
- ③ Browse your music files and enjoy!

MAIN MENU


Showing current playback status and navigating between:
Current file
All Songs
My Favorite
Browse Folders
Settings

NAVIGATION

Enter any menu by clicking the middle-button, return to last page with left button and scroll through the menu with up/ down buttons.

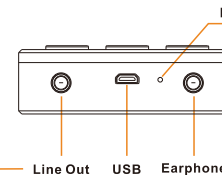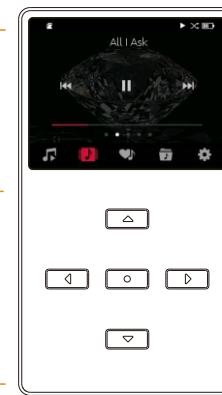

PLAYBACK MENU

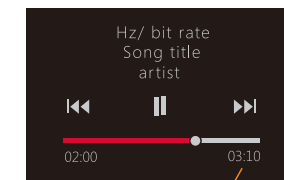 

Scrubber bar and time elapsed in track

 
HOME NAVIGATIONS

LEFT . HOLD LEFT, FAST BACKWARDS

PLAY PAUSE


RIGHT . HOLD RIGHT, FAST FORWARD

Hold the confirm button to enter the Play Settings menu, add/delete songs to "My Favorite", or change the play mode/ enable cue files

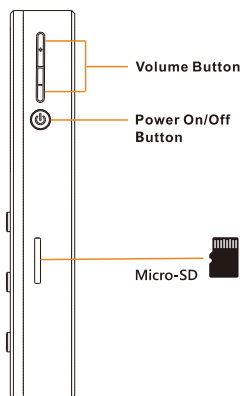

Update media library after inserting a new card. Use recovery option to return settings to default if needed

 UPDATING TO LATEST FIRMWARE

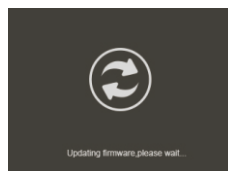

Download latest firmware from our website, copy the "update.zip" file to the Micro-SD card root folder. FAT32 card format is required

Power on and hold "⏻" button for 5 seconds until updating screen is shown.

System will auto update and restart.

CONNECTING TO PC



Power on after inserting the Micro SD card, plug in cable when you are at the Home screen. Copy the song from your PC to the corresponding drive and disconnect when finished. The system will restart automatically to scanning and renew the library.



Do NOT disconnect the cable in the process of data transfer.

Disclaimer: Dethonray reserves all rights on warranty decisions and changes on product specifications & parts without prior notice

SAFETY PRECAUTION

Do not attempt to disassemble, repair or modify the player by yourself. Do not use the player in circumstances of high temperature and humidity. Do not clean the surface of the player with chemical detergents. Do not insert other items into the earphone and line out ports. Any damages caused by the actions above will not be covered by the warranty. Dethonray CO, Ltd. reserves all rights on warranty decisions.

Charge the player with the included charger and charge it at least once every two months to prevent battery from over-discharging. Do not replace the lithium battery by yourself. Avoid potential injuries to hearing by listening to lower volume for shorter listening sessions. Adjust the volume to zero first, then gradually increase the volume to avoid potential damage to earphones and hearing. Dethonray will not be responsible for any hearing damage caused by mishandling or long listening time, so as any damage on audio gears due to high vol. or misuse.

Designed by
DETHONRAY CO, Ltd.

 
感谢选用

Dethonray Prelude 播放器。
此使用指南将介绍播放器的
基本操作、连接端口和使用
上的注意事项

播放器采用特殊定制的电源
系统，務求提供更穩定、更
高質素的電壓于電路。您將
感受到更細膩的回放表現，
更高的聲音密度，還有類似
台式機的驅動力

>>>

開機前請注意

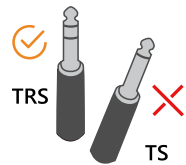

請勿嘗試插入3.5 TRS 3極以外的耳機
插頭，亦請避免把耳機插進 LO 口。
如因引致耳機或外接器材損壞本公司
並不會負擔維修責任

開始使用

- ① 插入Micro SD卡，
按開機鍵3秒開機
- ② 調低音量連接耳機
- ③ 進入選單選曲

 
主選單

顯示目前回放狀態、
可進入以下選單
目前播放的檔案
所有曲目
我的最愛
檔案瀏覽
設定


操作按鈕

點按中間的按鍵進入
選單，按左鍵返回上
一頁。按上、下鍵
瀏覽選單內的项目

Lineout
連接外部設備、汽車音響

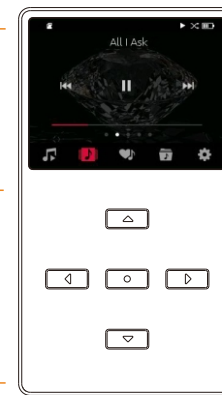

重置

 

Lineout USB 耳機口

回放頁面

 


顯示曲目進度

主選單操作


- 左鍵 長按快退
- 播放 暫停
- 右鍵 長按快進

於回放頁面長按中間鍵進入
播放選項選單。選單內可新增
曲目到 我的最愛，亦可選擇
開啟、關閉支援cue 檔案等

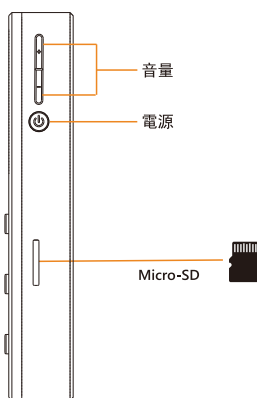

插入新的記憶卡后請更新媒體庫。如果系統出現異常可嘗試在設定選單內選擇系統回復，恢復成預設的設定

 更新至最新的固件

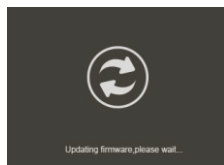

從網站上您可以下載到最新的固件。請將檔案 update.zip 拷貝到 Micro-SD 卡的根目錄注意需使用FAT32格式的儲存卡

長按機器正面下鍵并啟動播放器，不要放開下鍵，約5秒後將顯示固件更新畫面

完成更新後機器將自動重啟

連接電腦



如需使用讀卡器功能請先插入 Micro SD 卡。啟動機器并插上 USB 線材。電腦上將以硬盤形式顯示卡內的儲存空間。

傳輸完成後拔除USB線纜，機器將自動重啟和更新歌曲庫



傳輸期間切勿中斷 USB 連接

注意事項

由於客戶處理不當或擅自修理引起的問題，Dethonray將不作維修。播放器需放置於遠離高溫、潮濕的環境，請勿以化學清潔劑清潔播放器表面。請勿插入耳機插頭外的其他物品于播放器的 Lineout、耳機口內。以上條款和播放器參數如有更改，恕不另行通知

請使用專用充電器充電，并至少每兩個月充電一次以防止電池過放。請勿自行更換鋰電池。請勿長時間聆聽高音量的輸出，以防止聽力受損。插入耳機聆聽前請先將音量收小，并注意不要把耳機插進 Lineout 口。Dethonray 并不會為由高音量聆聽、不當使用引致的聽力損傷負責



©2018 DETHONRAY