

 
正面

Prelude

Quick start guide
快速使用指南



BEFORE POWERING UP...

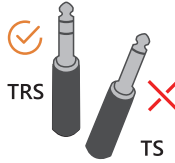

Caution: please do not attempt non 3.5mm TRS connections, TS connections may damage the device and will not be covered under warranty

QUICK START

 
 
- 1 Insert SD card, Hold power button for 3 seconds
- 2 Connect headphones
- 3 Browse your music files and enjoy!

MAIN MENU


Showing current playback status and navigating between:
Current file
All Songs
My Favorite
Browse Folders
Settings

NAVIGATION

Enter any menu by clicking the middle-button, return to last page with left button and scroll through the menu with up/ down buttons.

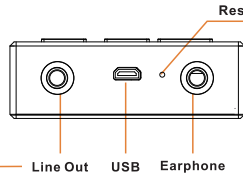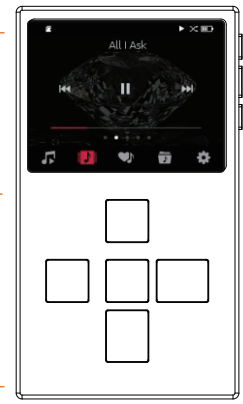


PLAYBACK MENU

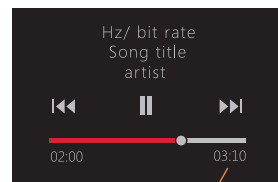 


HOME NAVIGATIONS

LEFT : HOLD LEFT, FAST BACKWARDS
PLAY PAUSE
RIGHT : HOLD RIGHT, FAST FORWARD

 Hold the confirm button (Middle button) to enter the Play Settings menu in the playback page.

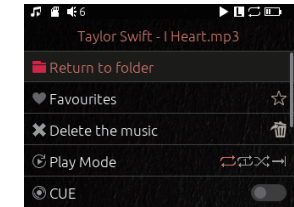


 Enter setting pop up menu, you can set all the options in setting menu, such as: add my favorite, delete songs, play mode, etc.

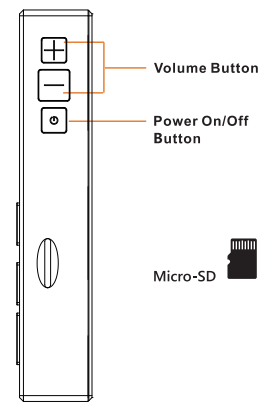

Update media library after inserting a new card. Use recovery option to return settings to default if needed

 UPDATING TO LATEST FIRMWARE

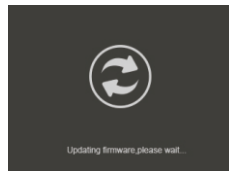

Download latest firmware from our website, copy the "update.zip" file to the Micro-SD card root folder. FAT32 card format is required. Power on and hold "Power On/Off" button for 5 seconds until updating screen is shown.

System will auto update and restart.

SAFETY PRECAUTION

Do not attempt to disassemble, repair or modify the player by yourself. Do not use the player in circumstances of high temperature and humidity. Do not clean the surface of the player with chemical detergents. Do not insert other items into the earphone and line out ports. Any damages caused by the actions above will not be covered by the warranty. Dethonray CO, Ltd. reserves all rights on warranty decisions.

Charge the player with the included charger and charge it at least once every two months to prevent battery from over-discharging. Do not replace the lithium battery by yourself. Avoid potential injuries to hearing by listening to lower volume for shorter listening sessions. Adjust the volume to zero first, then gradually increase the volume to avoid potential damage to earphones and hearing. Dethonray will not be responsible for any hearing damage caused by mishandling or long listening time, so as any damage on audio gears due to high vol. or misuse.

Disclaimer: Dethonray reserves all rights on warranty decisions and changes on product specifications & parts without prior notice

Designed by
DETHONRAY CO, Ltd.

 
背面

感谢选用
Dethonray Prelude 播放器。
此使用指南将介绍播放器的基本操作、连接端口和使用上的注意事项

播放器采用特殊定制的电系统，追求提供更稳定、更高素质的电音于电路。您将感受到更细腻的回放表现，更高的声音密度，还有类似台式机的驱动力

>>>

开机前请注意

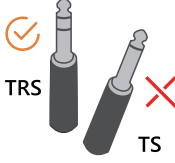

请勿尝试插入3.5 TRS 3极以外的耳机插头，亦请避免把耳机插进 LO 口。如因引致耳机或外接器材损坏本公司并不负责维修责任

开始使用

- 1 插入Micro SD卡，按开机键3秒开机
- 2 调低音量连接耳机
- 3 进入选单选曲

 
 
主选单

显示目前回放状态、可进入以下选单
目前播放的檔案
所有曲目
我的最愛
檔案瀏覽
設定

操作按钮

点按中间的按钮进入选单，按左键返回上一頁，按上、下键浏览选单内的项目

Lineout
连接外部设备、汽车音響

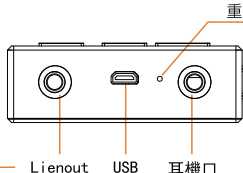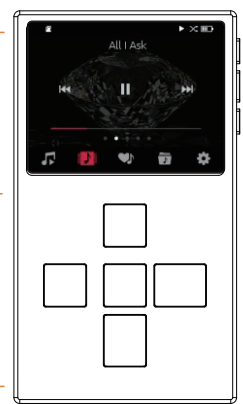

回放页面



 
主选单操作

左键 后退快速
播放 暂停
右键 前进快速

於回放页面长按中间键进入播放选项选单。




选单内可新增曲目到【我的最爱】，亦可選擇開啟、關閉支援cue 檔案等。

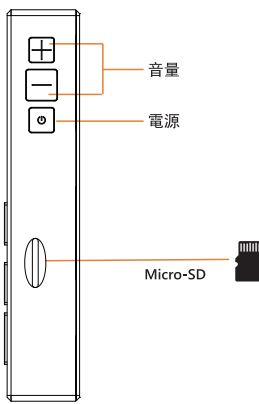

插入新的記憶卡后請更新媒體庫。如果系統出現異常可嘗試在設定選單內選擇系統回復，恢復成預設的設定

 更新至最新的固件

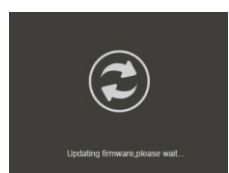

從網站上您可以下載到最新的固件，請將檔案 update.zip 拷貝到 Micro-SD 卡的根目錄。注意需使用FAT32格式的儲存卡

長按機器正面下鍵并啟動播放器，不要放開下鍵，約 5 秒後將顯示固件更新畫面

完成更新後機器將自動重啟

注意事項

由於客戶處理不當或擅自修理引起的問題，Dethonray將不作維修。播放器需放置於遠離高溫、潮濕的環境，請勿以化學清潔劑清潔播放器表面，請勿插入耳機插頭外的其他物品于播放器的 Lineout、耳機口內。以上緣故和播放參數如有更改，恕不另行通知

請使用專用充電器充電，並至少每兩個月充電一次以防止電池過放。請勿自行更換電池。請勿長時間聽高音量的輸出，以防止聽力受損。插入耳機聆聽前請先將音量收小，并注意不要把耳機插進 Lineout 口。Dethonray 並不會為由高音量聆聽、不當使用引致的聽力損傷負責



©2018 DETHONRAY

风琴折,四色印刷
纸张材质 冰白珠光 125g
成品尺寸108*45mm